

SPAESCORT[™] **COVER LIFT** Mounting Instructions

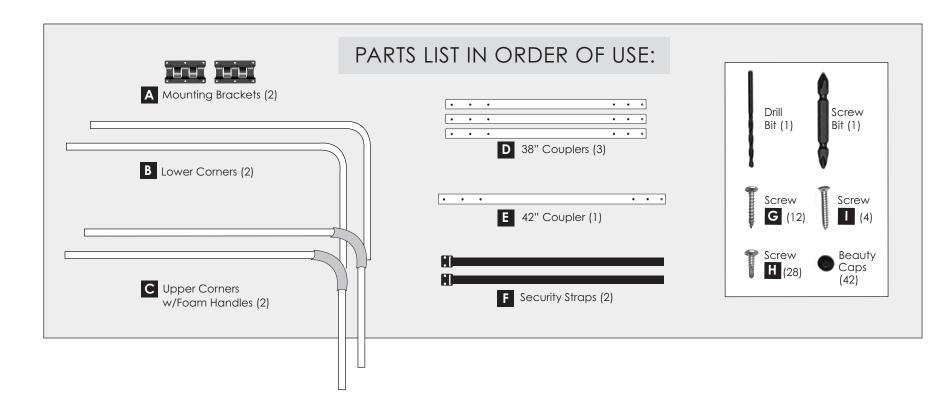



BEFORE YOU START:


Put the spa COVER properly in position on the spa in the closed position.


The COVER LIFT will be mounted in the same direction as

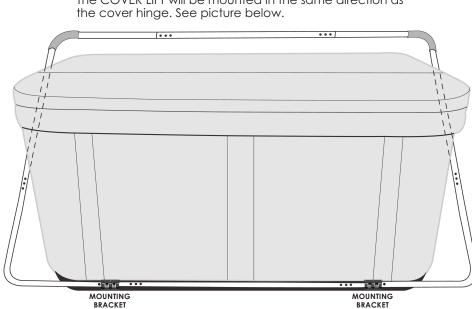


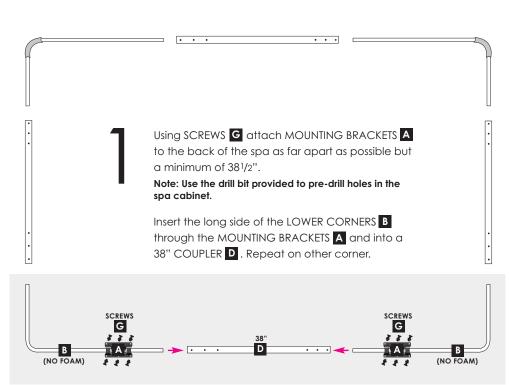

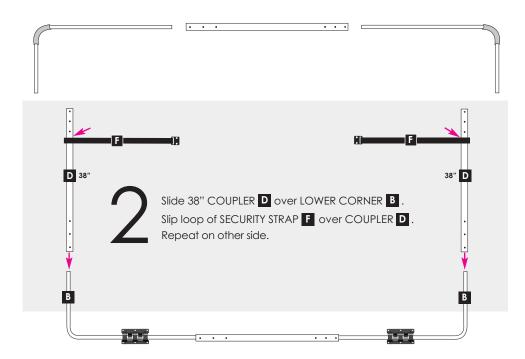


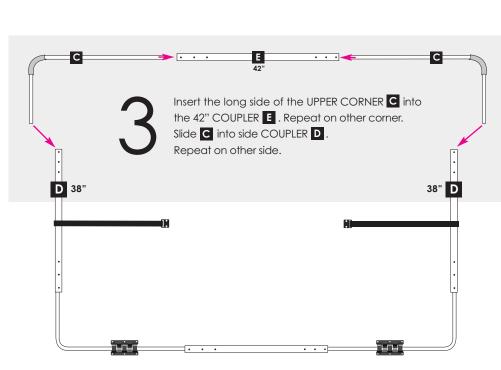

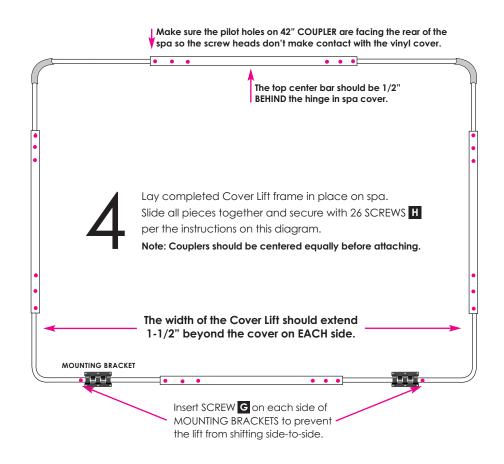


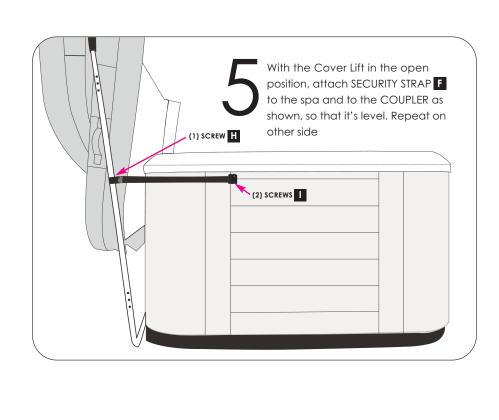

CUT HERE

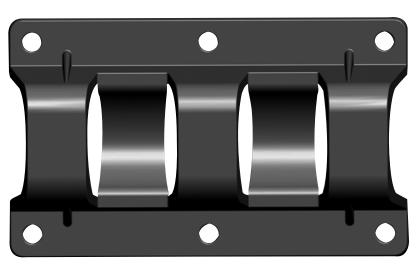

Bracket Templates

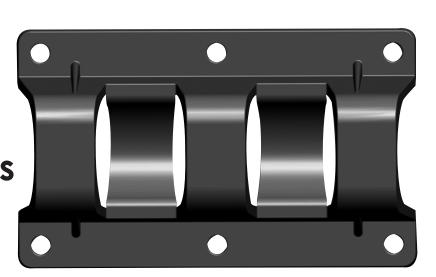

Cut each bracket template and tape as far apart as possible on the spa making sure they are level.

The MINIMUM distance the brackets can be mounted is 381/2" apart.

