


# SPAESCORT™ Entry Rail • UnderMount #8251

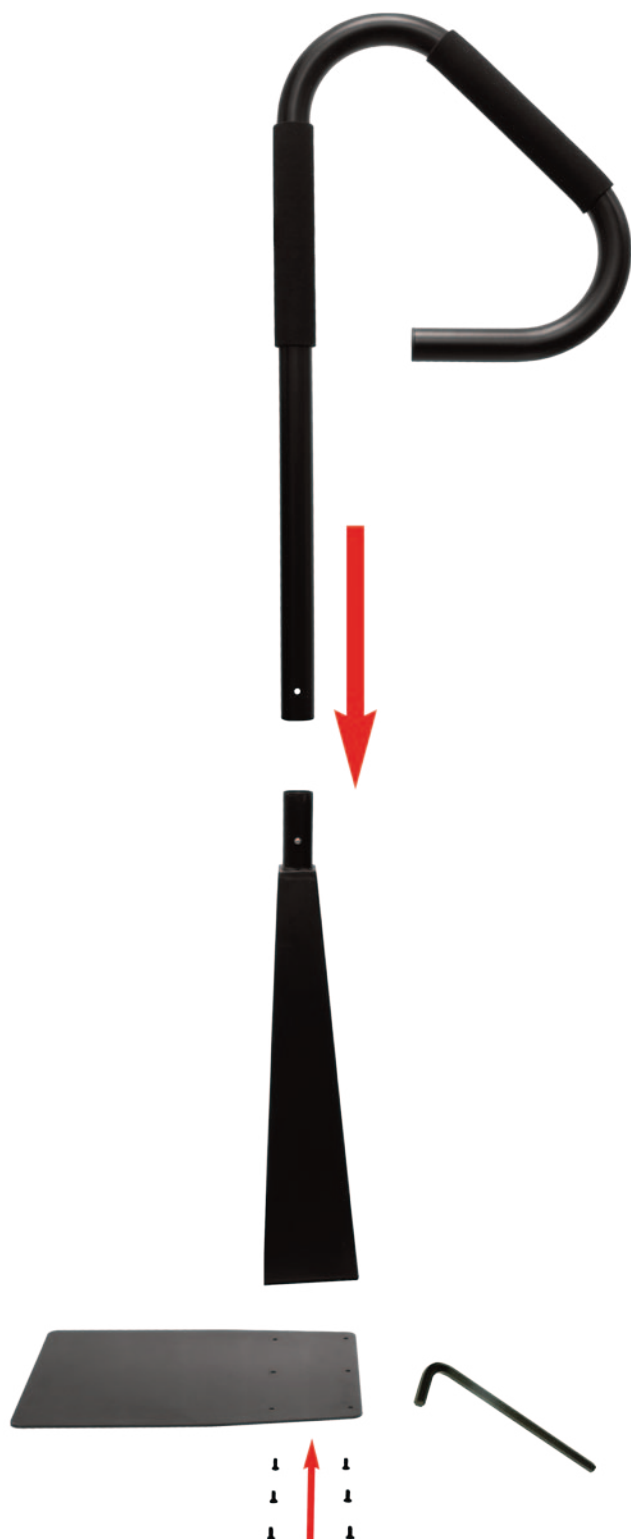

## PARTS LIST:

- (1) Upper Entry Handle
- (1) Lower Base Unit
- (1) UnderMount Plate
- (1) Hardware Kit
  - 6 Allen Screws
  - 1 Allen Wrench

## ASSEMBLY:

1. Attach the UNDERMOUNT PLATE to the LOWER BASE UNIT using the (6) Allen screws.
2. Slide ENTRY HANDLE onto BASE UNIT until it locks in place.
3. Place in desired location under an empty spa then fill the spa with water.

Manufactured for:

**ESSENTIALS**

Essentials is an industry leader in spa accessory and maintenance products. To view our complete product offering, visit us at:

[www.Essentials-SpaSupplies.com](http://www.Essentials-SpaSupplies.com)

All items can be ordered through your local retailer.

©2024 ESSENTIALS - Cumming, GA 30041