


Confer – Ultra Spa Steps

Assembly and Instruction Manual

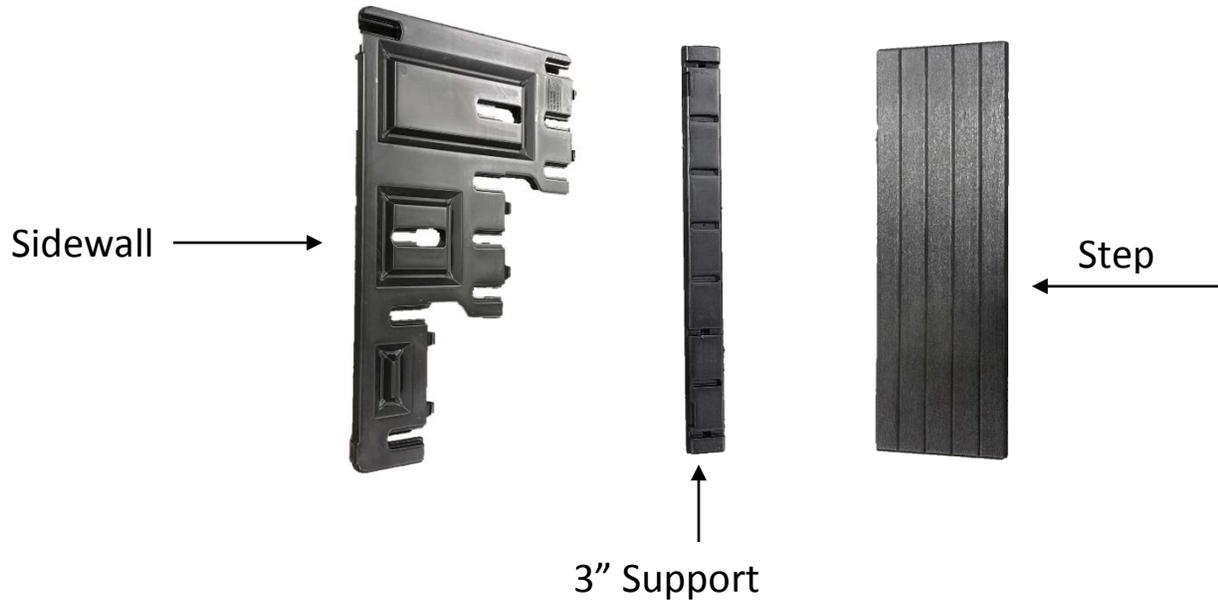

Confer Plastics Ultra Spa Steps Carton Contents:

- 2 – Sidewalls
- 3 – 36" Steps
- 7 – 36" x 3" Supports



Made in U.S.A. by


CONFER
plastics inc.
www.conferplastics.com

Confer – Ultra Spa Steps

Assembly and Instruction Manual



Step 1: Install the foam pads (4) on the flat spots located on the bottom edge of the side wall

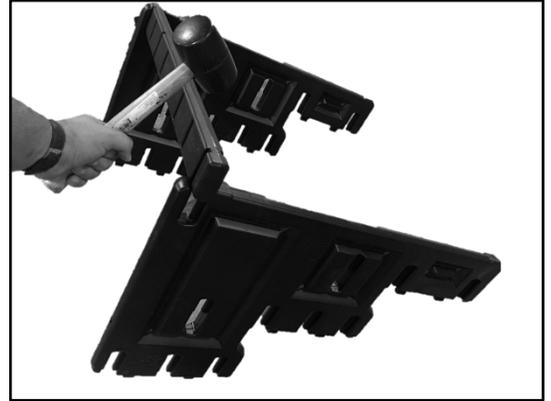

Step 2: Using a rubber mallet install one of the 3" supports into the slot located on the bottom of the side wall



Step 3: Turn the step assembly over and finish installing the 3" supports into the front and back slots of each step location



Step 4: Install the steps (finished edge out) by placing over the male lugs on the step sidewall and hitting downward with a rubber mallet. If the treads don't fully engage onto the lugs it may be necessary to step on the tread directly over the lugs and force down with your foot.



CONFER
plastics inc.

97 Witmer Road

North Tonawanda, NY USA 14120-2421

800-635-3213 | Fax: 716-694-3102

www.conferplastics.com

email: Leisureaccents@conferplastics.com