

#8241



SPAESCORT

DLX

HYDRAULIC LIFT



NEW DLX MODEL!
Attractive Beauty Plates
cover all bracket hardware
for a sleek, finished
appearance.

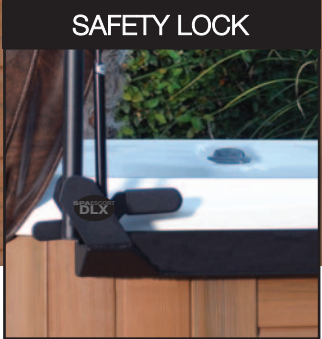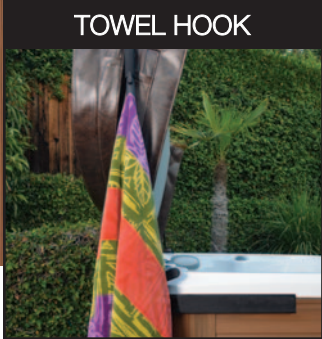


PARTS LIST:



A Right Bracket (1)



B Left Bracket (1)

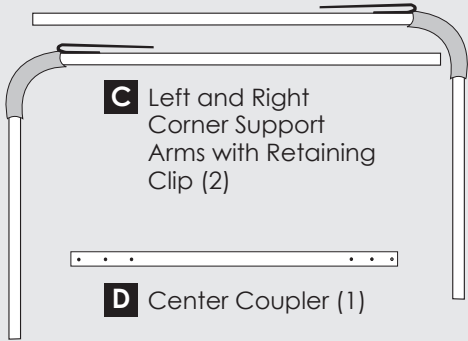

C Left and Right Corner Support Arms with Retaining Clip (2)

D Center Coupler (1)



E Wood Screws (32)



F Self-Tapping Screws (14)

Also Included:

- (1) Philips Head Bit
- (1) 1/8" Drill Bit
- (2) Bolts
- (4) Large Bolt Beauty Caps
- (4) Small Bolt Beauty Caps
- (14) Screw Beauty Caps

G Upper Bracket Beauty Covers (2)



H Side Bracket Beauty Covers (2)



I End Plugs (2)



J Towel Hook (1)

Missing or Damaged Parts?

Do not return the product to the retailer. For immediate assistance contact ESSENTIALS.



In the United States:
800-866-2499 (phone)
800-334-0010 (fax)

Outside the United States:
001-626-305-1182 (phone)
001-626-305-0230 (fax)

Via Email:
Orders@Essentials-SpaSupplies.com


1

Put the spa COVER properly in position on the spa in the closed position. The COVER LIFT will be mounted in the same direction as the cover hinge (see completed overhead below left). Now, push the cover towards the front of the spa for easy access to the side bracket mounting locations.

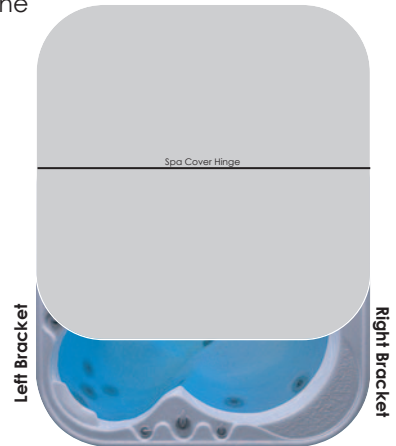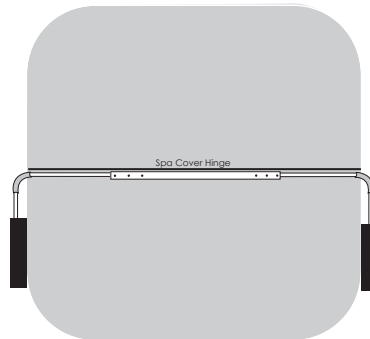

2

Attach the RIGHT BRACKET [A] using 15 SCREWS [E] as shown. Brackets should be located immediately under the acrylic edge of the spa, and 4" – 5" (10-15cm) from the rear of the spa. For spas with large radius corners, you can skip the rear holes and insert only 12 Screws. Repeat on other side with LEFT BRACKET [B].

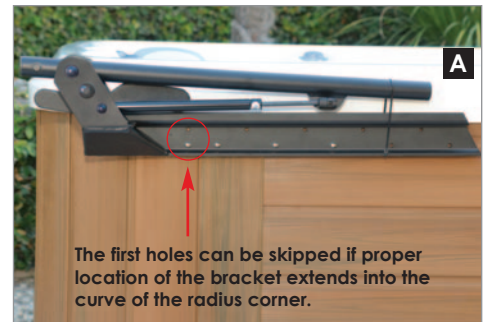


The first holes can be skipped if proper location of the bracket extends into the curve of the radius corner.

Note: To avoid splitting a wood spa cabinet, it is recommended you pre-drill the holes.

3


Insert the RETAINING CLIP on the RIGHT CORNER SUPPORT ARM [C] under the hinge in spa cover (1). Slide CENTER COUPLER [D] over the RIGHT CORNER SUPPORT ARM (2). Slide the LEFT CORNER SUPPORT ARM [C] into the other end of the CENTER COUPLER (3) while sliding the RETAINING CLIP of the LEFT CORNER SUPPORT under the cover hinge (4).

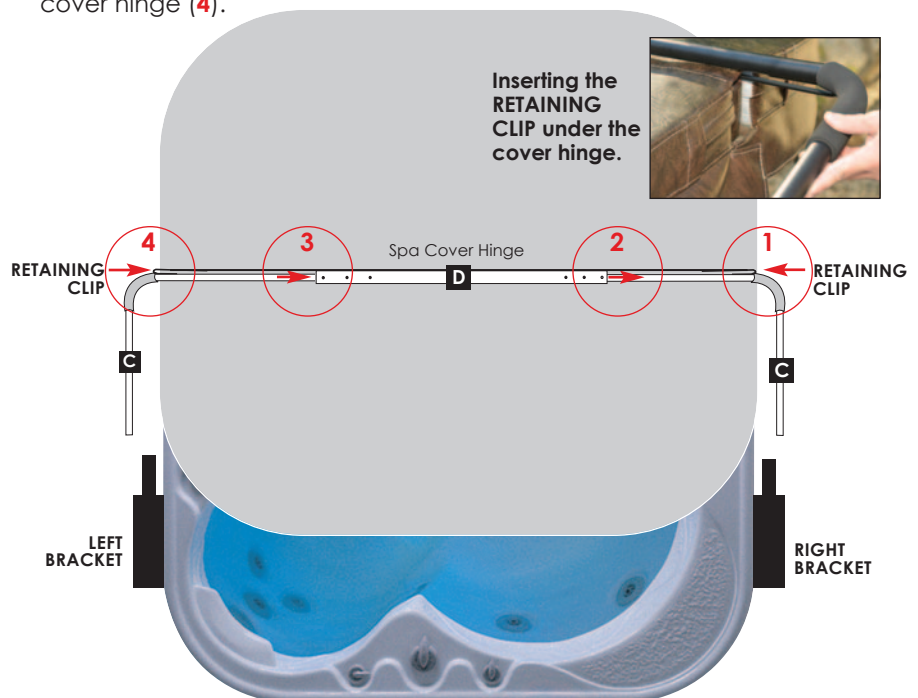

Inserting the RETAINING CLIP under the cover hinge.

4


Line the completed Center Coupler Assembly next to the center seam of the cover. Pull the SPA COVER and completed assembly slowly back towards the LEFT AND RIGHT BRACKETS. Insert CORNER COUPLERS into BRACKET ARMS.

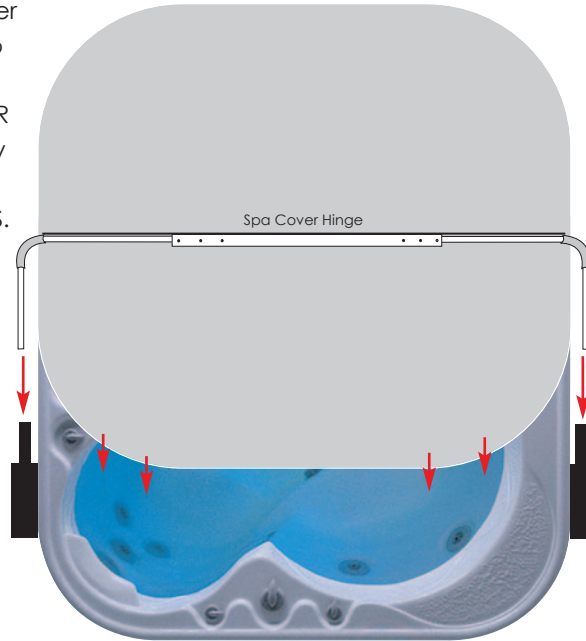

5



Confirm the spa cover is properly on the spa and all four corners are aligned.

With the completed Cover Lift frame in place on the spa cover, secure the LEFT AND RIGHT SUPPORT ARMS to the LEFT AND RIGHT BRACKET with SCREWS [F] as indicated below. Then position Coupler and also attach with SCREWS [F]. Prior to attaching the loose end of the hydraulic piston, manually flip the spa cover back and into the upright and open position. Install the HYDRAULIC as shown in photo (below right) in the lower hole using the (2) BOLTS.

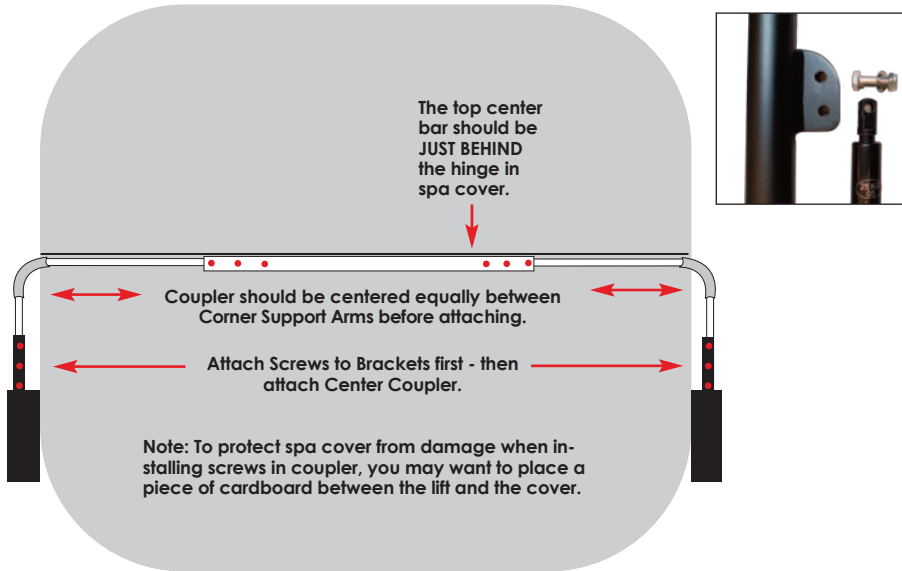


6

Slide BEAUTY COVERS [G] and [H] onto the Top and Side of the LEFT and RIGHT BRACKET. Insert END PLUGS [I] into the exposed end of both BRACKETS.

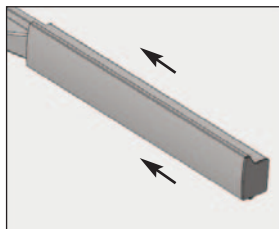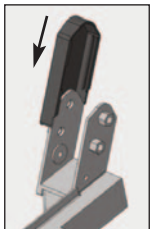

SPECIAL REFERENCE:

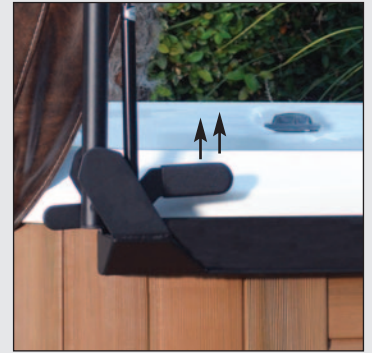

Important Safety Feature:

The Spa Escort DLX Hydraulic Lift is equipped with a Safety Lock that prevents the lid from shutting when in the open position. To close the cover, simply lift the Safety Lock and the cover will release.



Bonus! Towel Hook

The Spa Escort DLX Hydraulic Lift includes a convenient Towel Hook. With the cover in the OPEN position, simply position the Towel Hook on the upright support arm and attach using 2 Screws [F].

MISSING OR DAMAGED PARTS

If there are any missing or damaged parts, please do not return product to retailer. Contact ESSENTIALS for immediate replacement.

ONE YEAR WARRANTY

ESSENTIALS warrants this product to be free from defects in WORKMANSHIP and MATERIALS for a period of ONE YEAR. Should a part fail under normal use within this period, ESSENTIALS will replace the defective part(s) FREE of charge.

Cost of repair, removal or re-installation, or any consequential damages are not covered under this warranty.

EXCLUSIONS

Warranty extends only to the original purchaser and is based on normal usage conditions. This warranty does not extend to any damages from abuse, misuse, improper installation, abnormal usage, fading with minor deteriorations caused by exposure to the environmental factors or use of chemical substances.

Do not leave the lift open when not in use or during times of windy conditions.

ESSENTIALS is not responsible for incidental or consequential damages arising from the use or performance of the product.

Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you. The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties. This warranty gives you specific legal rights.

Manufactured for:

The logo for ESSENTIALS features the word "ESSENTIALS" in a bold, teal, sans-serif font. Each letter has a small, stylized wave or splash graphic at its base, giving it a aquatic or spa-related feel.

Essentials is an industry leader in spa accessory and maintenance products.

To view our complete product offering, visit us at:

Essentials-SpaSupplies.com